

**CROSLEY**

# NEEDLE INSTALLATION

## NP-3

### REMOVING NEEDLE:

1. Gently pull down on the front of the needle.
2. Pull needle forward.
3. Pull out and remove.



### INSTALLING CARTRIDGE:

After following "Removal instructions" above, follow steps 1 to 4.

1. Position needle with diamond stylus facing down.
2. Line up the tab on the back of the needle with tone arm (as shown in picture 1 below).
3. Insert the needle, with the tip at a downward angle, making sure to insert the tab into the tone arm (as shown in picture 2 below).
4. Lift the front of the needle upwards and into the tonearm until it snaps into place. You will hear a click when needle locks into place.



### ADDITIONAL INFORMATION:

- Take note that the replacement needle you are receiving is the same as the needle already on the tonearm.
- This needle is used for 33 1/3, 45 & 78 speed records.
- Replacing the needle depends on how often you use your turntable.
- This diamond stylus will provide an average of 1000 hours playing time.
- To order additional needles, please contact your retailer/cataloger or Crosley Radio at 1-866-CROSLEY.

**CROSLEY**

1220 East Oak Street • Louisville, Kentucky 40204  
1-866-CROSLEY  
WWW.CROSLEYRADIO.COM